
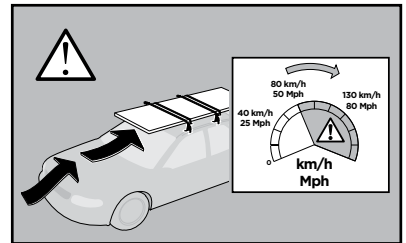
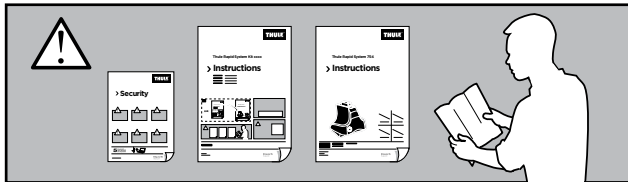
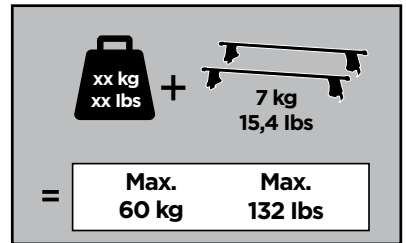


Thule Rapid System Kit 1543

> Instructions

RENAULT Scénic III, 5-dr MPV, 09-

RENAULT Grand Scénic III, 5-dr MPV, 09-

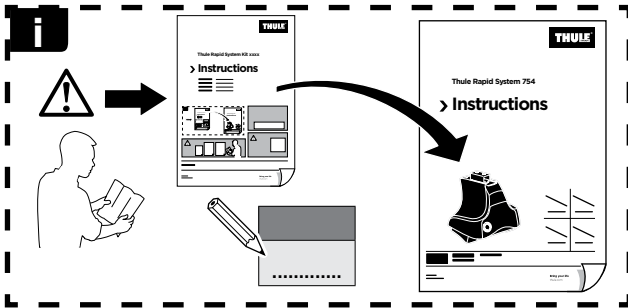

ISO 11154-E


141543

C.20120525
519-1543-01


Bring your life
thule.com



179 x2




181 x2



1053 x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
RENAULT Scénic III, 5-dr MPV, 09-	41,5	1066	42
RENAULT Grand Scénic III, 5-dr MPV, 09-	41,5	1066	42

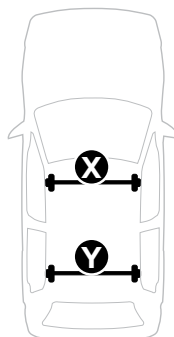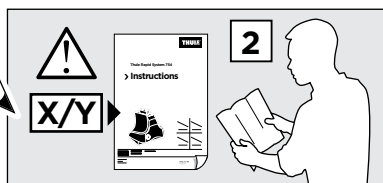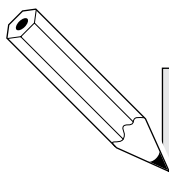


	Y (scale)	Y (mm)	Y (inch)
RENAULT Scénic III, 5-dr MPV, 09-	40,5	1056	41 ⁵ / ₈
RENAULT Grand Scénic III, 5-dr MPV, 09-	40,5	1056	41 ⁵ / ₈

2

RENAULT Scénic III, 5-dr MPV, 09-
RENAULT Grand Scénic III, 5-dr MPV, 09-

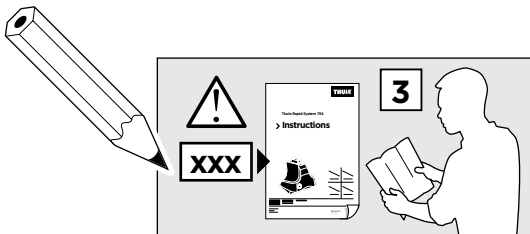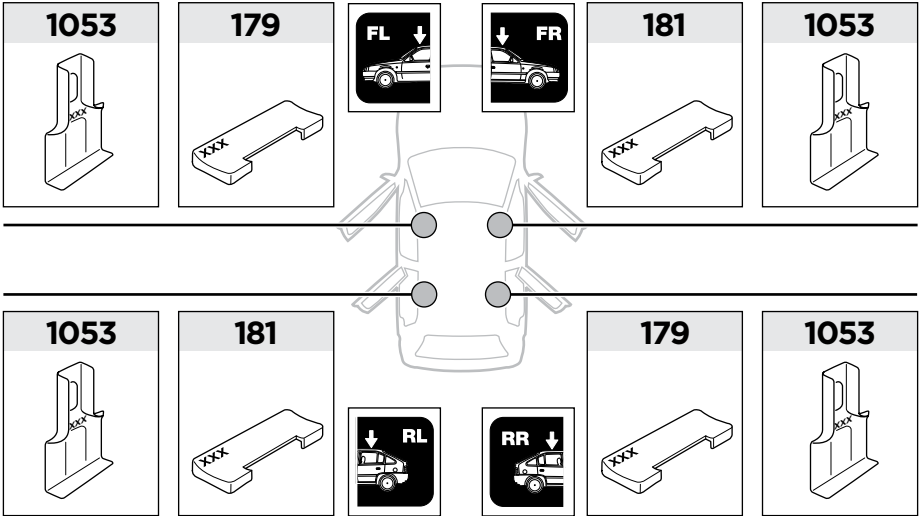

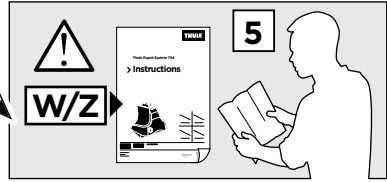3

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Scénic III, 5-dr MPV, 09-	265	730	10 ³/₈	28 ³/₄
RENAULT Grand Scénic III, 5-dr MPV, 09-	265	730	10 ³/₈	28 ³/₄

